

KNS Adjustable Gas Piston System—Abbreviated Instructions

1. Ensure the firearm is clear and safe before proceeding
2. Remove remaining rivet from carrier nose and unscrew piston
3. Install KNS piston in carrier and secure with supplied roll pin
4. Perform first adjustments unsuppressed with standard ammunition
5. Start at fully-closed position and open in 5 click increments to failure
6. Close in 2 click increments until reliable cycle is achieved
7. Perform all subsequent adjustments from Step (6) baseline